

WD/WS Manual Reset

How to do a manual reset on the WD/WS units.

MANUAL RESET - To be used only in the event that the network primary controller is lost or otherwise inoperable.

1. Turn switch on by tapping the top of the paddle once.
2. Quickly tap top of the paddle 3 times.
3. Quickly tap bottom of paddle 3 times.
4. If light turns off and then on again, switch is reset. If not, repeat manual reset.