

Z-Wave Installation


Information on installing the UI and the Core plugin.

Overview

HomeSeer has two Z-Wave plugins, UI and Core. The UI plugin allows for mobile friendly and better ease of use while the Core plugin is the brains and backend of Z-Wave integration but the UI is not mobile friendly and more difficult to use. The Core plugin is required to use the UI plugin but the UI plugin is not required to use the Core plugin, standalone.


Navigation

Go to PluginsAdd

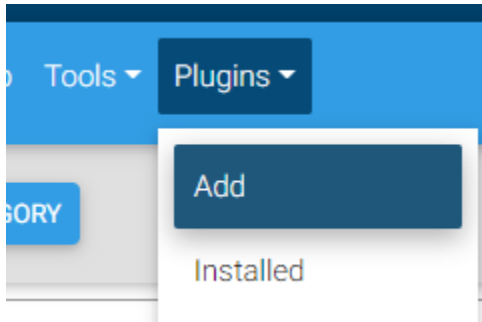


Procedure

1. Locate the featured section at the top the Add Plugins page.
2. Locate Z-Wave Core in the Legacy section. Alternatively, you can search for "z-wave" or find Z-Wave Core in the list.

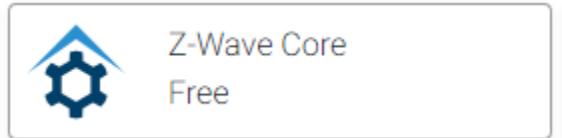


3. Click on the plugin card and select Install.

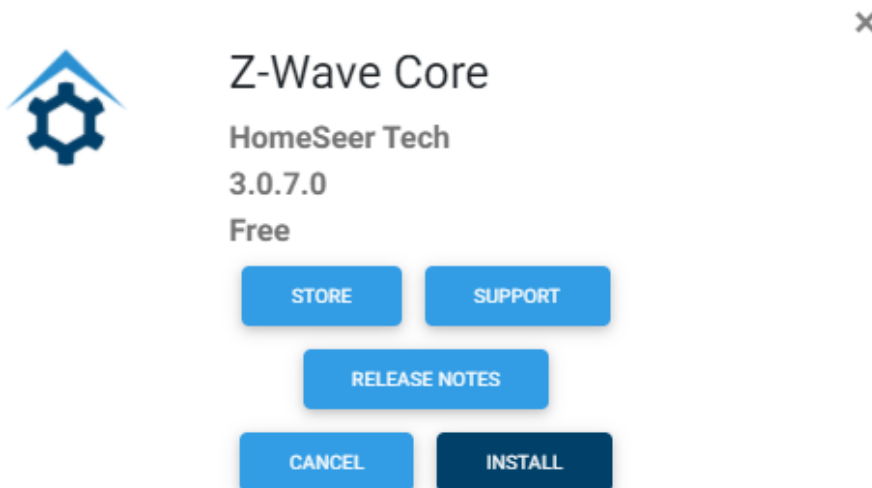


4. Once the Install is finished you will get a confirmation and be brought to the Installed section of Plugins.
5. From there the plugin will need to be enabled.
6. Go back to PluginsAdd
7. Locate the featured section at the top the Add Plugins page.

8. Locate Z-Wave UI in the featured section. Alternatively, you can search for "z-wave" or find Z-Wave in the list, alphabetically.

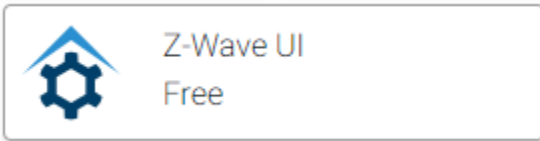


9. Click on the plugin card and select Install. You can also view the Release Notes from here.

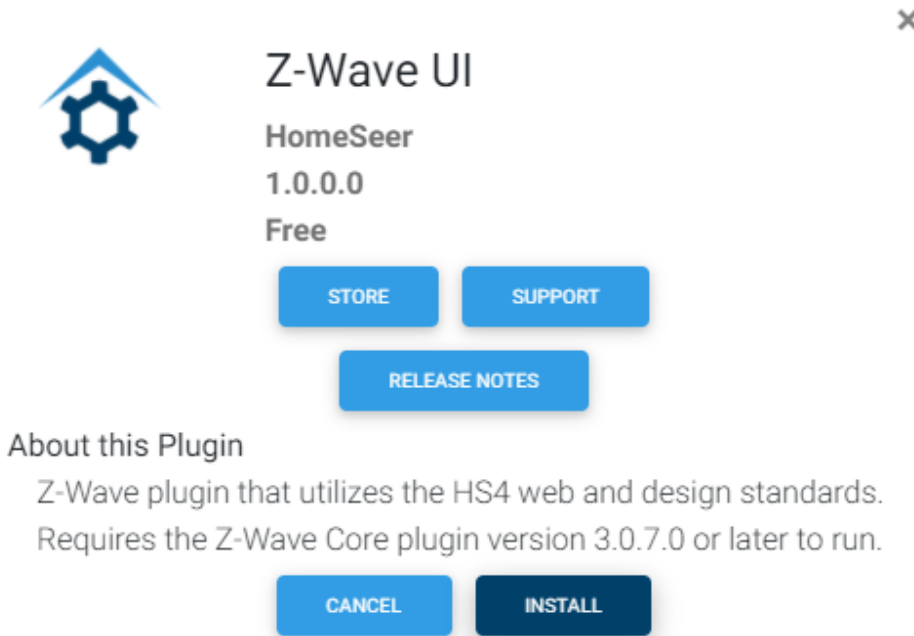

10. Once the Install is finished you will get a confirmation and be brought to the Installed section of Plugins.

11. From there the plugin will need to be enabled. Your installed page should look like this:

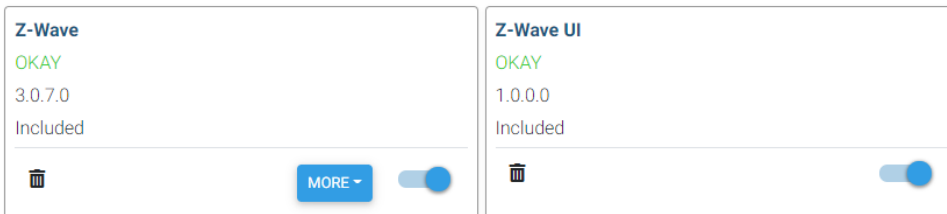

Notes