

Z-Wave

Articles pertaining to the Z-Wave software plugin

Z-Wave Installation

Information on installing the Z-Wave plugin for HS4

- [Updating Z-Wave Plugin](#)

Information on updating or upgrading an existing Z-Wave plugin.

Add Device

Information on adding Z-Wave devices to your network

Remove Device

Information on removing Z-Wave devices from your network

Add Interface

Information on adding Z-Wave interfaces to your HomeSeer platform.

Manage Interfaces

Information on managing the Z-Wave interfaces connected to your HomeSeer platform.

Update Firmware

Information on how to update your Z-Wave device firmware.

Device Diagnostics

Information on using the different types of Z-Wave device diagnostic tools built into the plugin.

- [Rescan](#)

Information on a Z-Wave device rescan.

- [Remove Bad Node](#)

Information on removing a bad Z-Wave node from HS4

- [Test Connectivity](#)

Information on performing a connectivity test on a Z-Wave device.

- [Full Optimize](#)

Information on performing a full optimization of your Z-Wave Network

Advanced Functions

Information on using the many advanced controller functions.

- [Add Unsecure](#)

Information on adding a device using the unsecure inclusion method of Z-Wave.

- [Node Test](#)

Information on performing a Node Test on a Z-Wave network

- [Restart Interface](#)

Information on restarting your Z-Wave interface.

- [Backup Interface](#)

Information on backing up a Z-Wave interface on the HomeSeer platform.

- [Restore Interface From Backup](#)

Information on restoring Z-Wave network to a hardware interface on the HomeSeer platform.

- [Reset Data](#)

Information on performing a Reset Data on a Z-Wave network.

Manage Locks

Information on managing Z-Wave door locks on your network.

Manage Associations

Information on managing Z-Wave associations on your network.

Device Information

Information on reading and using the Z-Wave Device Information tool.

Legacy Z-Wave

Information on using the Legacy Z-Wave plugin, version 3.0.6.0 or earlier.

- [Adding and Removing Z-Wave Devices](#)

Information on adding and removing a Z-Wave device via the Z-Wave core legacy menu.

- [Adding a Z-Wave Controller](#)

In order to control Z-Wave devices, such as light switches, thermostats, door locks and sensors, they must be included into a Z-Wave "network". Follow the steps below to add your Z-Wave controller and create a Z-Wave network.

- [Displaying Status of Two Sensors with One Icon \(HS3\)](#)

How-to display status of two sensors with one icon in HS3. Note: This will work in HS4 but the steps included graphics are inaccurate.

- [Erasing a Z-Wave Controller](#)

The erase operation deletes all Z-Wave information from your controller. It also removes the Z-Wave node ID from all of your existing Z-Wave devices. After this procedure, your devices will no longer function. You will need to re-add your devices. If you plan on restoring your Z-Wave node information from a backup file, use the "Restore a Network to this Interface option".

- [Importing Z-Wave Devices](#)

Importing devices will pull the Z-Wave devices from your interface into your Devices page. This can be useful if your system stops working and you do not have a backup, or if you are using an Aeon Labs Z-Stick to add devices that live far away from your HomeSeer system.

- [Updating Z-Wave Plugin \(HS3\)](#)

Information on updating an existing Z-Wave plugin in HS3.

Settings

Information regarding Settings for the Z-Wave plugin.

Frequently Asked Questions

- [How do I upgrade to version 4.0 of the Z-Wave plugin?](#)
- [How do I install the new Z-Wave plugin?](#)
- [How do I import my devices from an existing Z-Wave controller?](#)
- [How do I update my existing Z-Wave plugin?](#)

Need more help?

- Get support by [creating a ticket here](#)
- [Community Support](#)
- [More info](#) on HomeSeer